


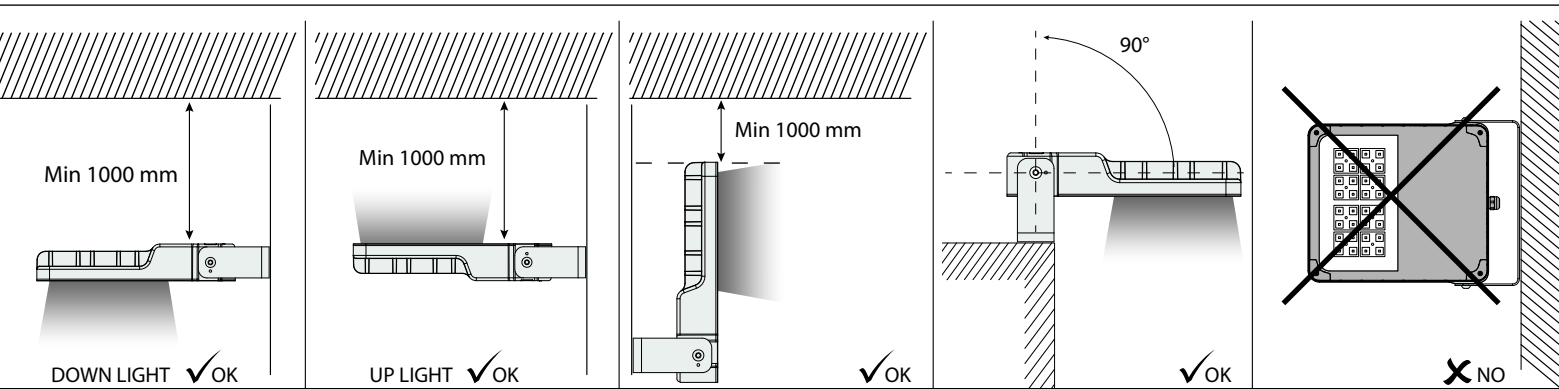
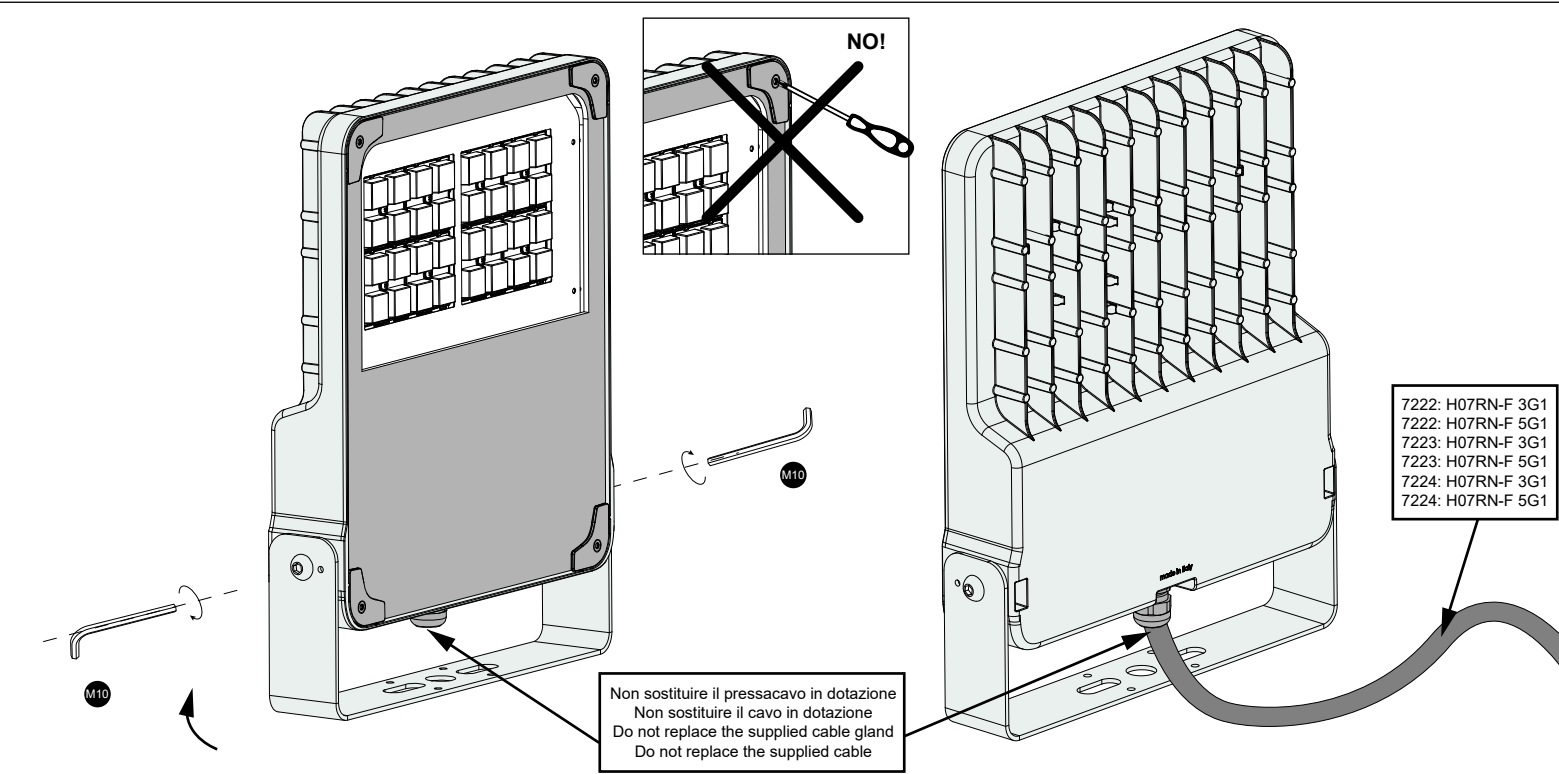
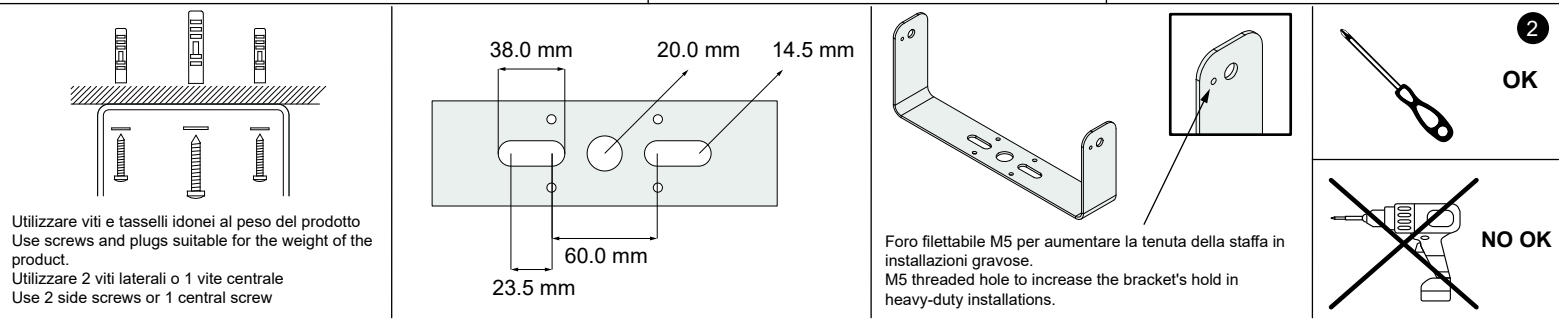
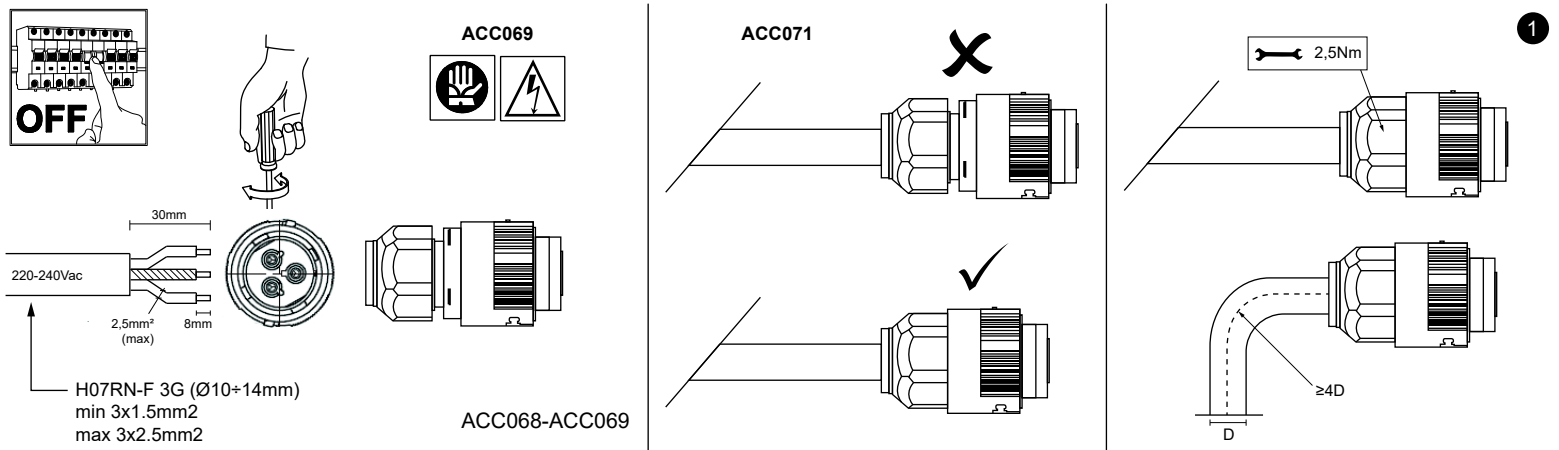
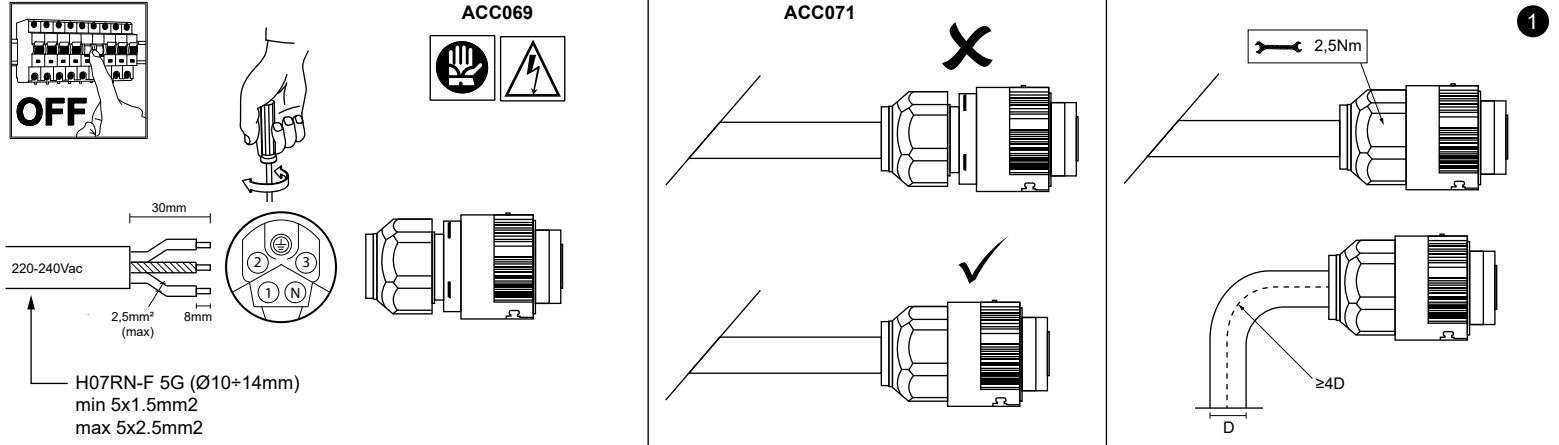


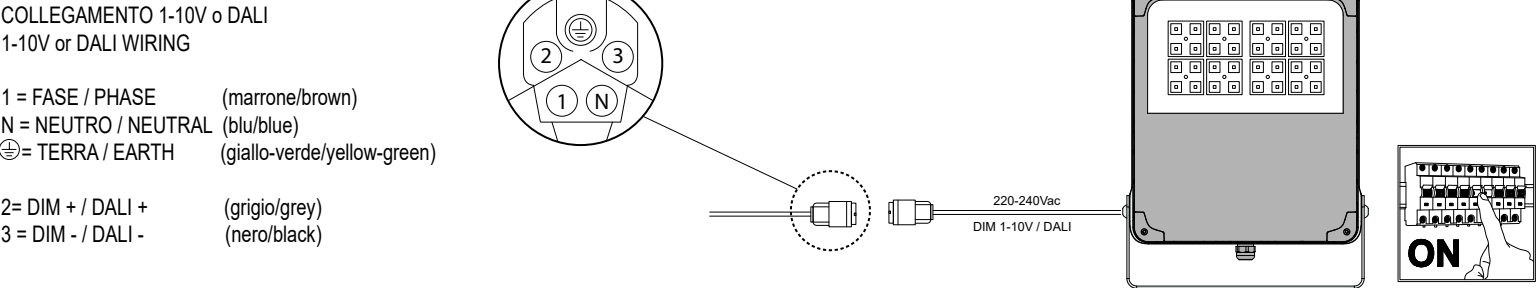

ACC070-ACC071

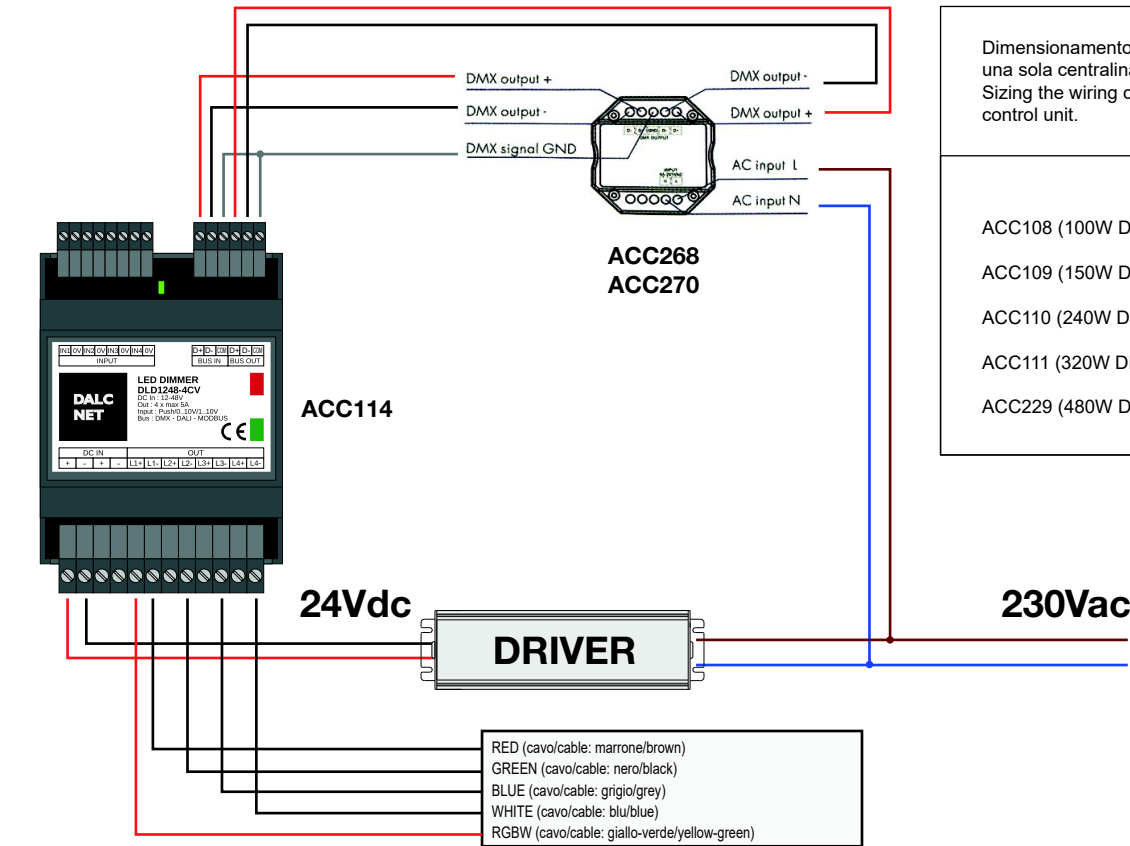

CG version

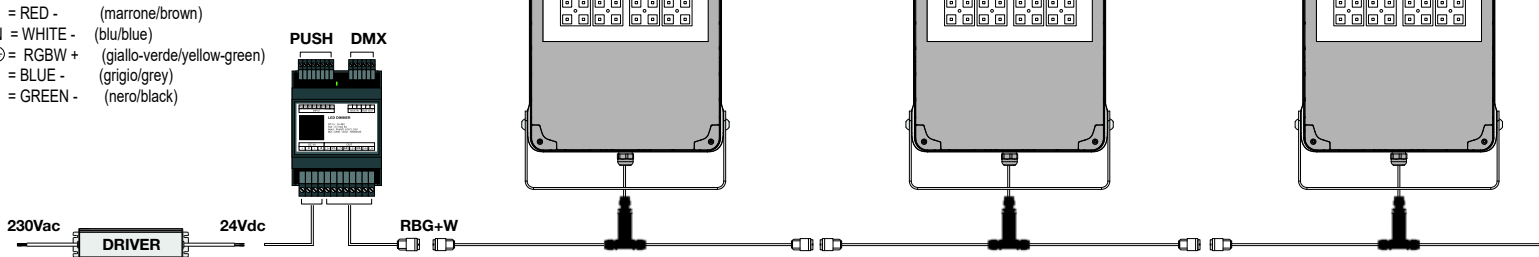

Dimensionamento del cablaggio considerando l'utilizzo di una sola centralina ACC114.
Sizing the wiring considering the use of a single ACC114 control unit.

	75W	150W	225W
ACC108 (100W DRIVER)	1 pcs	-	-
ACC109 (150W DRIVER)	2 pcs	1 pcs	-
ACC110 (240W DRIVER)	3 pcs	1 pcs	1 pcs
ACC111 (320W DRIVER)	4 pcs	2 pcs	1 pcs
ACC229 (480W DRIVER)	6 pcs	3 pcs	2 pcs

MANUALE DI UTILIZZO
Telecomando per controllo BEST RGB

1 ACCOPPIAMENTO DEL DISPOSITIVO

1



 
Accendere il telecomando tramite il pulsante "WAKE". Una volta acceso il telecomando, dare alimentazione al faro.

2



Entro 10 secondi dall'accensione del faro, 4 volte di seguito il pulsante "ON/OFF" della zona desiderata per associare il faro alla relativa zona

3

 X3

Al termine della procedura, i LED del faro lampeggeranno 3 volte, confermando l'avvenuto accoppiamento.



 
SE L'ACCOPIAMENTO NON VA A BUON FINE
Spegner e riaccendere il faro.
Ripetere la procedura entro i primi 10 secondi dall'accensione.

NOTE



ACCOPIARE TUTTE LE ZONE CONTEMPORANEAMENTE

Per assegnare il faro a tutte le 4 zone contemporaneamente, durante il processo di accoppiamento premere 4 volte consecutive la tasto "ALL ON/OFF", invece del tasto "ON/OFF" della singola zona.



RIATTIVAZIONE DEL TELECOMANDO

Se il telecomando non viene utilizzato per 10 secondi, entrerà automaticamente in modalità stand-by. Per riattivarlo premere il pulsante "WAKE". Una volta premuto il telecomando sarà nuovamente operativo.

2 MEMORIZZAZIONE DELLE SCENE

1



Associare il faro alla zona desiderata

2



Impostare il colore e l'intensità desiderati

3



Tenere premuto il pulsante della scena corrispondente scelta per 4 secondi

4



Quando il faro inizia a lampeggiare, lasciare il pulsante

5



Per richiamare una scena salvata, premere il relativo pulsante



NOTA: l'ultima scena salvata nello stesso slot sostituirà automaticamente quella precedente.

3 DUPLICAZIONE TELECOMANDO
Per copiare tutte le impostazioni dal Telecomando A al telecomando B

1

Sul telecomando A, tenere premuto il pulsante **ALL ON/OFF** per **5 secondi**.

2

Rilasciare il pulsante e premerlo rapidamente 3 volte, il telecomando entrerà in modalità duplicazione e l'indicatore LED blu rimarrà acceso.

3

Premere qualsiasi pulsante sul telecomando A.

4

Premere qualsiasi pulsante sul telecomando B.

5

Quando gli indicatori LED bldi entrambi i telecomandi si spegneranno, la duplicazione sarà stata completata con successo.

4 DISACCOPIAMENTO TELECOMANDO
Per disaccoppiare un telecomando da un faro

1

Tenere premuto il pulsante "ALL ON/OFF".

2

Togliere alimentazione al faro.

3

Continuando a mantenere premuto il pulsante, ripristinare l'alimentazione del proiettore.

4

Attendere che il faro lampeggi 5 volte, poi rilasciare il pulsante. Il disaccoppiamento sarà stato effettuato

USER MANUAL
BEST RGB Remote Control

 
1 DEVICE PAIRING

1




Switch on the remote control by pressing the "WAKE" button. Once the remote control is switched on, power the floodlight.

2



Within 10 seconds after switching on the floodlight, press the "ON/OFF" button of the desired zone 4 consecutive times to pair the spotlight with the corresponding zone.

 3

 X3

At the end of the procedure, the floodlight LEDs will flash 3 times, confirming that the pairing has been successfully completed.



 
IF THE PAIRING IS NOT SUCCESSFUL
Switch the floodlight off and then back on.
Repeat the procedure within the first 10 seconds after switching it on.

NOTES



PAIR ALL ZONES SIMULTANEOUSLY

To assign the floodlight to all 4 zones simultaneously, during the pairing process press the "ALL ON/OFF" button 4 consecutive times instead of the "ON/OFF" button of the individual zone.



REMOTE CONTROL REACTIVATION

If the remote control is not used for 10 seconds, it will automatically enter standby mode. To reactivate it, press the "WAKE" button. Once pressed, the remote control will be fully operational again.

2 MEMORIZZAZIONE DELLE SCENE

1



Pair the floodlight with the desired zone

2



Set the desired colour and intensity

3



Press and hold the selected scene button for 4 seconds.

4



When the floodlight starts flashing, release the button.

5



To recall a saved scene, press the corresponding button.



NOTE: The latest scene saved in the same slot will automatically replace the previous one.

3 REMOTE CONTROL DUPLICATION
To copy all settings from Remote Control A to Remote Control B

1

On Remote Control A, press and hold the "ALL ON/OFF" button for 5 seconds.

2

Release the button and press it quickly 3 times. The remote control will enter duplication mode and the blue LED indicator will remain on.

3

Press any button on Remote Control A.

4

Press any button on Remote Control B.

5

When the LED indicators of both remote controls turn off, the duplication process has been successfully completed.

4 REMOTE CONTROL UNPAIRING
To unpair a remote control from a floodlight

1

Press and hold the "ALL ON/OFF" button.

2


Disconnect the power supply from the floodlight.

3

While continuing to hold the button, restore power to the floodlight.

4

Wait until the floodlight flashes 5 times, then release the button. Unpair is successful.

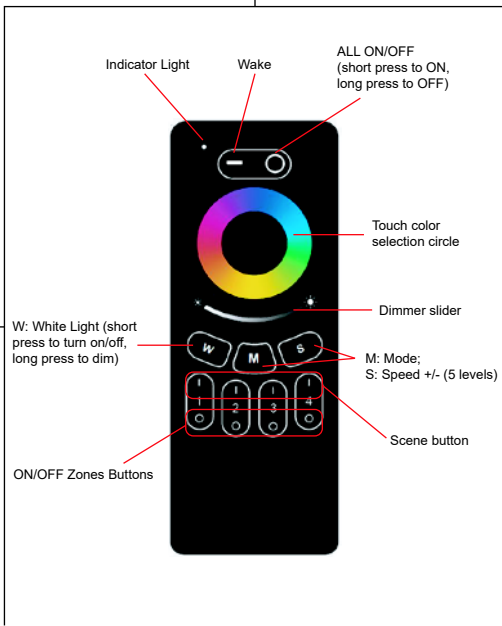



ATTENZIONE
Conservare il seguente manuale per future consultazioni.
Per ulteriori informazioni contattare il servizio assistenza



ATTENTION
Keep this manual for future reference.
For further information, please contact the customer service.